


CLOS

1

Allen Key 4mm

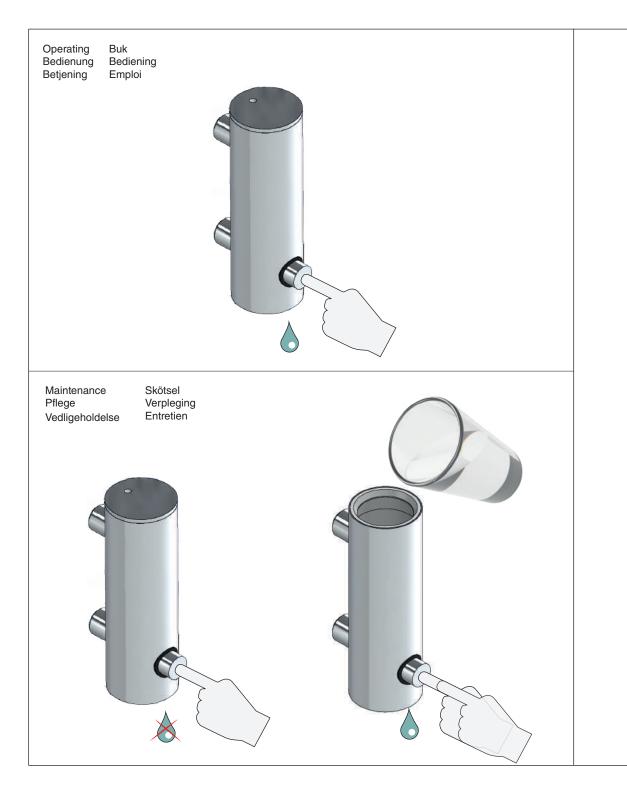

## MAINTAINING THE DISPENSER

- If the dispenser is not used for a long period of time and becomes clogged.
- Pour ONLY warm water into the dispenser and gently pump it to clear the blockage.
- NEVER try inserting a sharp object e.g. pin into the soap nozzle, which could irreparably damage the pump and void the warranty.
- ONLY clean inside the dispenser with warm water.
- NEVER use solvents or aggressive household cleaners like bleach, acids (e.g. descalers) or ammonia-based bathroom cleaner.
- To clean the outside of the dispenser, use warm soapy water or approved stainless steel cleaners.
- Should brown deposits appear around the lid or pump, remove with a brush or pan cleaning pad and soapy water.
- Hard deposits can be scratched off with your fingernail or a blunt knife.
- It is not exactly rust, and to avoid it, try changing to a milder liquid soap with a neutral PH

